



Upgrades

eMate






RAM


Before you begin, remove the access cover.

Caution: The eMate contains components that are susceptible to ESD damage. To prevent damage, wear a grounding wriststrap. Review the ESD precautions in Bulletins/Safety.

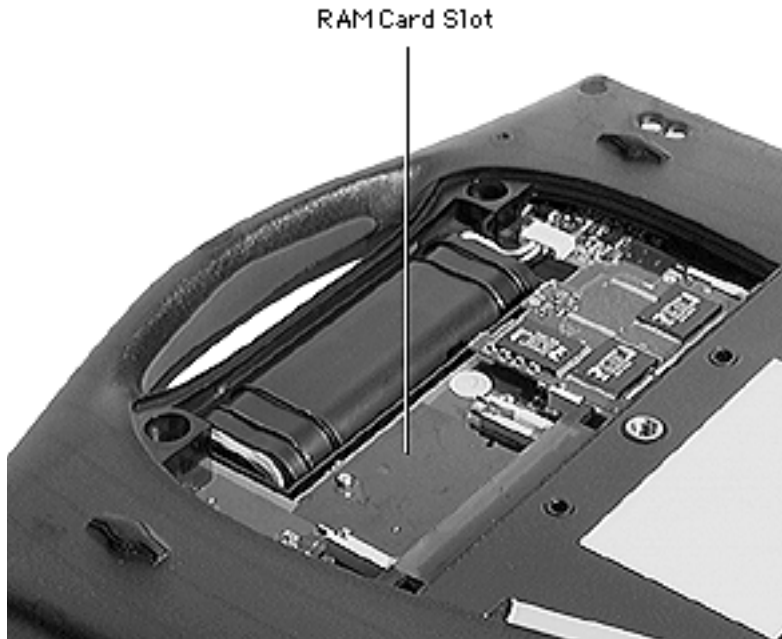




RAM Card

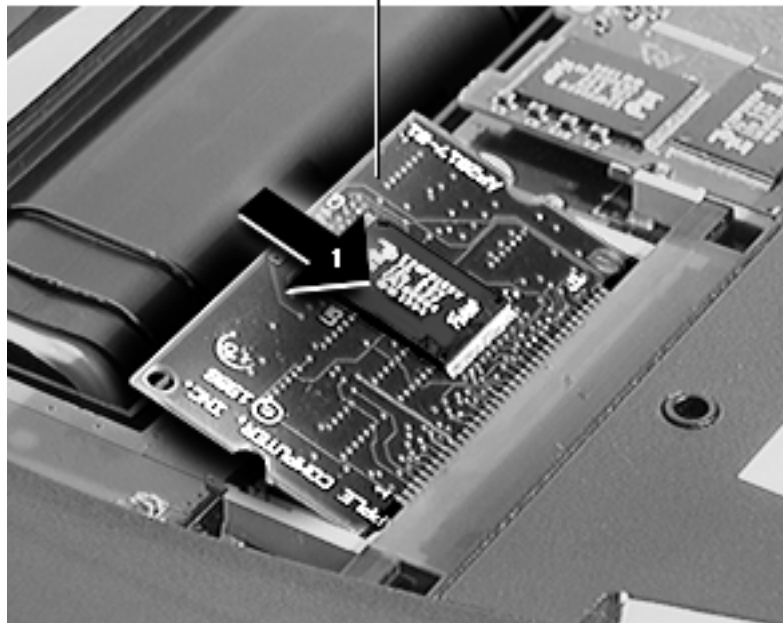

Note: RAM cards are not available from Apple. They can be purchased from third-party vendors.

- 1 Insert the RAM card connector into the RAM card slot at about a 30 degree angle.



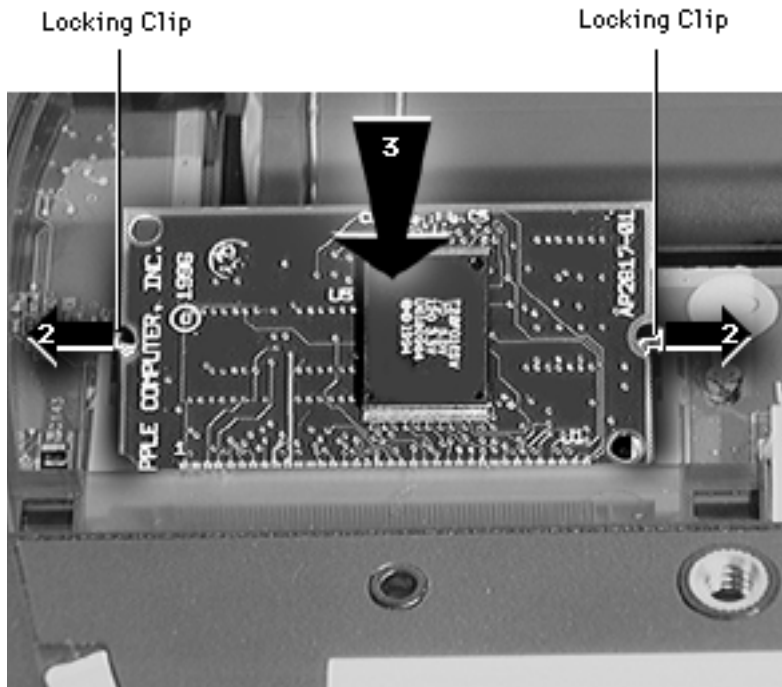

- 2 Push outward on the metal locking clips.
- 3 Press the RAM card down to the locking clips.
- 4 Release the locking clips so that they engage each side of the RAM card.

